




Operation Instructions for Mini Bag Sealer

便携迷你封口机使用说明书

Function Declarations of Bag Heat Sealer 封口机功能说明

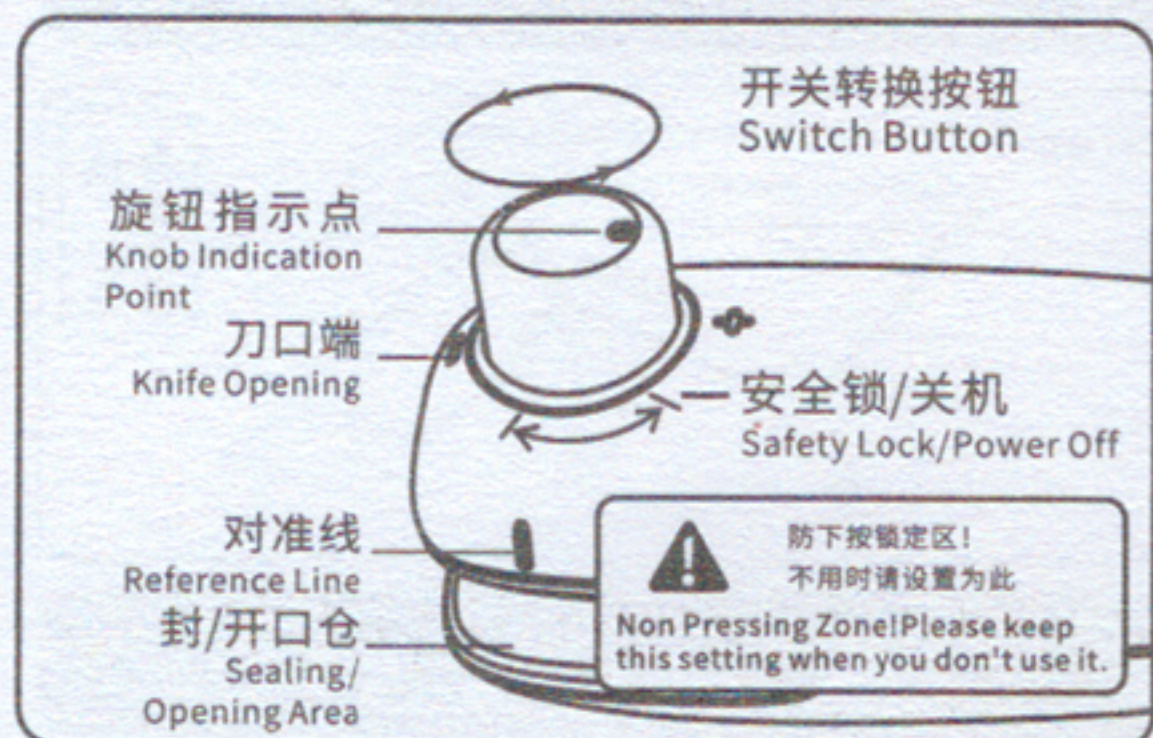

注意


This product should be powered by 2 AA alkaline batteries, not by zinc-manganese dry batteries which can't work on it.
本产品必须使用5号碱性电池，碳性电池无法驱动。

CAUTION 警告

Warning: Don't put your finger into the sealing or opening gap to avoid being scalded or stabbed by accidental operations.
不得将手指伸进封口机/开口仓避免误操作烫伤，刀尖刺伤



Battery Installation (2*AA alkaline batteries) 电池安装 (AA 五号碱性电池*2个)

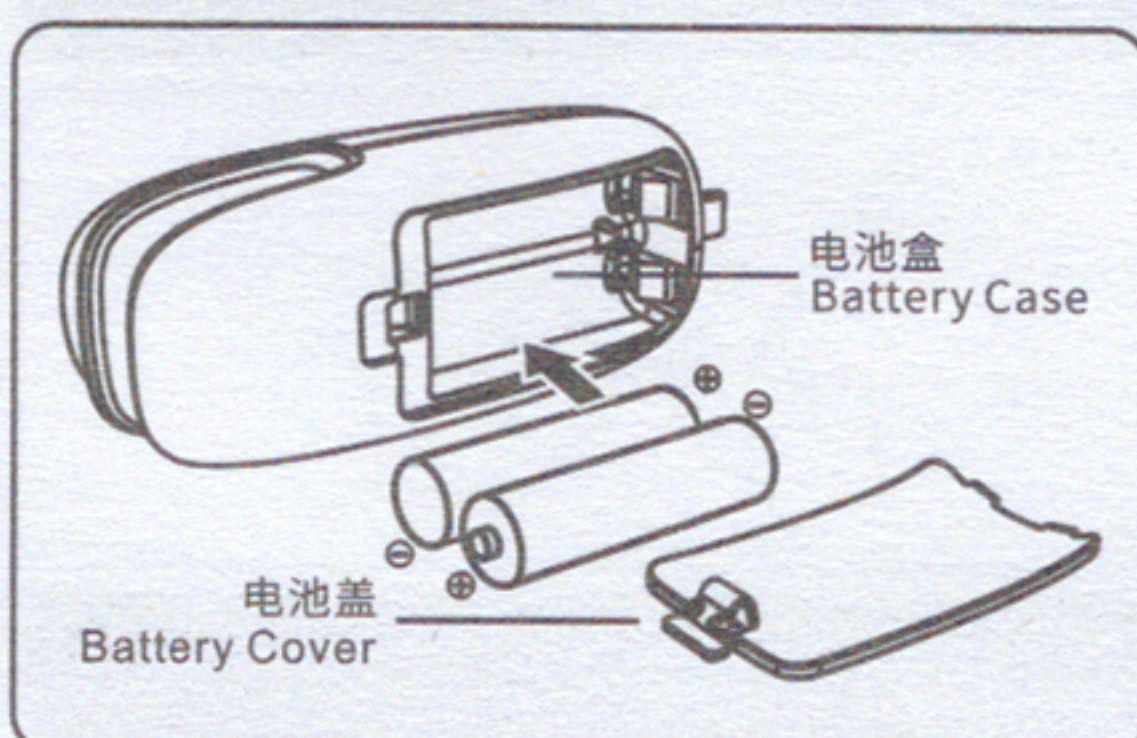

Product Usage/产品用途

Retaining fresh of snacks, moisture proof and mould proof;
Convenient for sealing plastic bags;
Suitable for storage bags, snack bags, seasoning bags, flour bags and other plastic package bags.
零食保鲜、防潮、防霉，便捷封口塑料袋子。茶叶袋、味料袋、盐袋、中药袋、燕窝袋等塑料包装袋。

Notes/注意事项

This product is a small sealing machine for domestic use. Please don't exceed 1 min for using each time. You should use it again in 5 mins after sealing for about 1 min.

本品属于小型家用封口机，每次使用时间请勿超过1分钟；使用1分钟后，请隔5分钟后再使用。

Please take out the batteries when you don't use it for a long time.

长时间不使用时，请将电池取出。

Please put this bag heat sealer out of children's touching.

请将本品置于儿童不可触及处。

Attention: Applicable Scope/注意：适用范围

Coated aluminum foil bag, PP, PE, PVC bag with thickness of 0.2mm.

覆膜铝箔袋、聚丙烯、聚乙烯、聚氯乙烯材质为0.2mm厚的袋子。

1

2



Sealing Operation Steps

封袋使用方法


Align the direction circle to the sealing side and press the knob.
指示圈对准封口端，按压旋钮。

Step 1




Press the knob and make it move equably.
按压住旋钮，保持均匀拖动。

Step 2

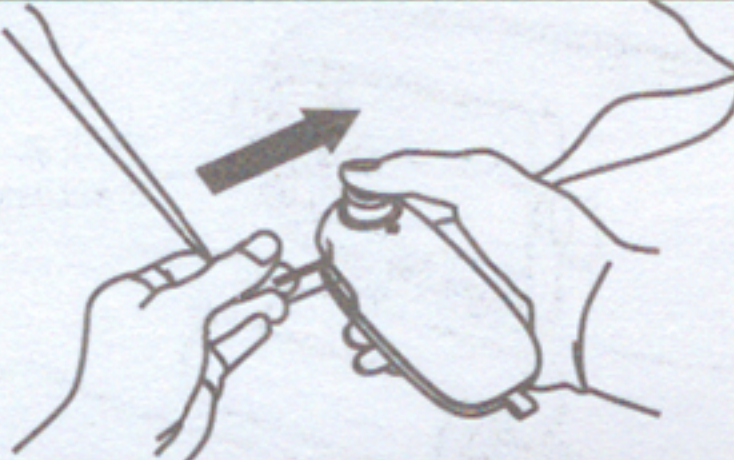

Move to the end and seal fully.
拖动至末端，完全封紧。

Step 3

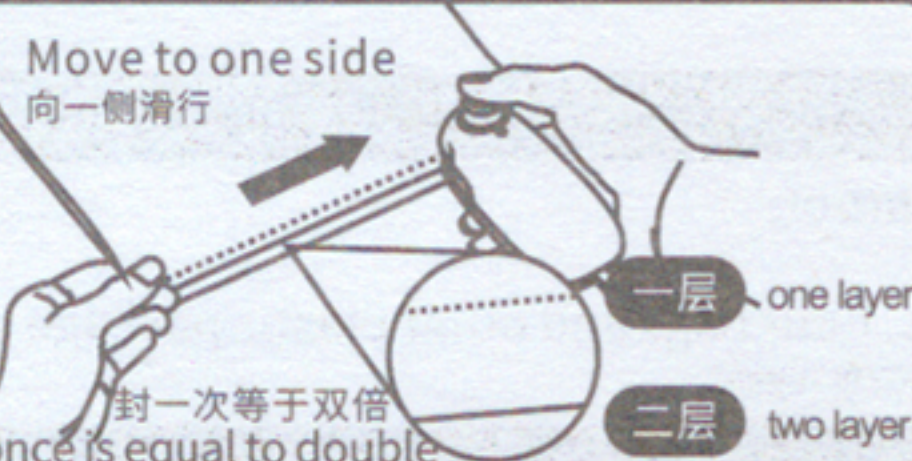

Cross-seal it tightly
交叉封紧。

Step 4



3




Opening operation

开袋使用方法

Rotate the knob for 180° to the blade side.
将旋钮转动180°至刀口端。

Step 1

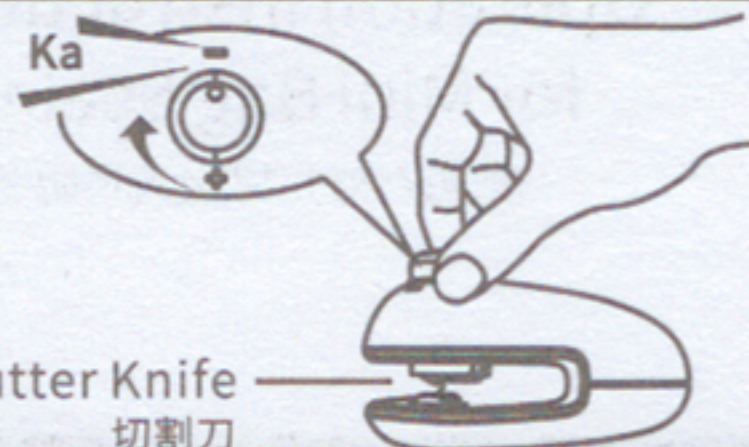

Press the blade button and glide.
下压刀口按钮滑动。


Step 2



Warning 警告

Please adjust the knob indication point to the middle area.
旋钮指示点在中间

Safety Lock/Turn Off
安全锁/关机

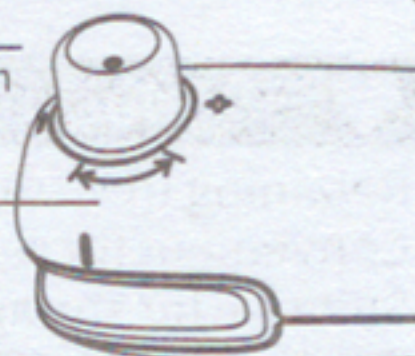

When you don't use this bag sealer or put it in your backpack or pack it into the package, please rotate the knob indication point to the middle area, between "+" and "-", in order to lock it and avoid product damage due to unexpected heating.

不使用产品时，放背包时，装回包装时，请将旋钮转至 "+" "-" 号中间，以锁定按钮，避免误加热对产品造成损坏。



4